

# Apollo Alphanumeric Pager Programming Directions

## 924



## Gold



## 812 / 824



- TO PROGRAM PAGERS, REMOVE BATTERY AND HOLD DOWN BUTTON 1. INSERT BATTERY AND HOLD BUTTON DOWN UNTIL CAPCODE SHOWS IN THE DISPLAY.
- TO CHANGE CAPCODE PRESS BUTTON 2 TO CHANGE THE NUMBER (1,2,3, ETC) AND BUTTON 1 TO MOVE TO THE NUMBER TO THE RIGHT. WHEN CAPCODE IS COMPLETE PRESS BUTTON 3 TO MOVE TO THE NEXT SCREEN.
- BAUD RATE (POCSAG ONLY) – TO CHANGE THE BAUD RATE PRESS BUTTON 2 TO CHANGE BETWEEN 512 , 1200, 2400. PRESS BUTTON 3 WHEN DONE. (THIS SCREEN IS NOT AVAILABLE ON THE FLEX MODELS)
- POCSAG PAGERS HAVE 6 CAPCODES. FLEX MODELS HAVE 8 (FOR LONG ADDRESS PROGRAMMED PAGERS) CAPCODES OR 16 FOR (SHORT ADDRESS PROGRAMED PAGERS)
- THE PAGER WILL BEEP AND SHOW "PASS: THIS CONFIRMS THAT THE PROGRAMMING HAS BEEN ACCEPTED.

### DIGITAL PAGING COMPANY

10825 BURBANK BLVD  
NORTH HOLLYWOOD, CA 91601  
818-508-5700  
818-508-5800 FAX  
WWW.APOLLOPAGERS.COM