



GL1201A25

USER MANUAL

 
• **Alpha-Numeric Display Pager** •

**MODEL: AL-A25e / AL-929
FP-A25e**

Control Buttons	1
Features and Functions	2-3
LCD Display	4
Function Operation.....	5-20
Reading a Message	5
Locking Message	6
Unlocking Message	7
Deleting Message	8
Deleting All Message	9
Move to Message Memo	10
Setting Alert	11
Pager On / Off	13
Setting Auto Sleep	14
Setting Alarm	15
Setting Time And Date	16
Setting Scroll	17
Setting Zoom In Or Zoom Out	19
Reading Mail Drop	20
Moving The Cursor	21
Reading Personal Message.....	22
Reading Full Message	23
Backlight / Duplicate	24
Error Message / Battery Gauge	25
Set Mail Drop Alert	26

Control Buttons

MODEL:AL-A25/929

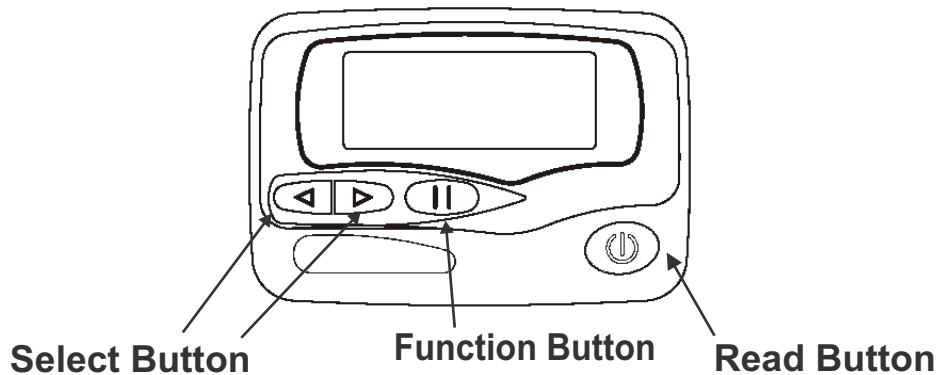

- ⏻ Read Button**
- to read message
 - to turn on back-light
 - to turn on power
 - to activate the function

- ◀ ▶ Select Button**
- to move the cursor
 - to preview message by cycles

- ⏹ Function Button**
- to display the function menu
 - to adjust the time and date change
 - to enable the function mode
 - to move cursor to general or mail drop area

 
 
 
Set Mail Drop Alert

To move the cursor to the Mail Drop.


Press **■** , to display the function menu.


Press **◀** or **▶** , to move the cursor to set mail drop alert (**♪**).

Press **■** , to activate the function .Or press **⏻** , to exit the function .

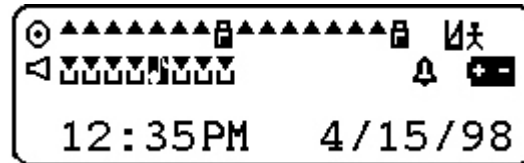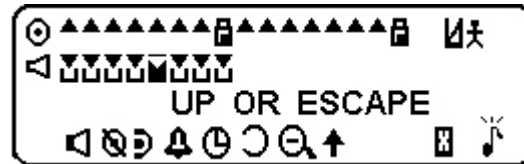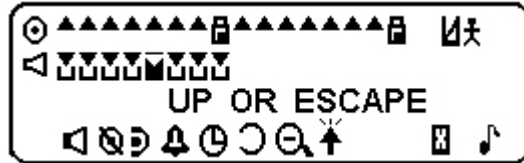





Error Message

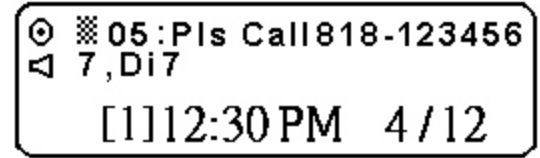 If it is received the error message. The  symbol is shown in the top left-hand corner of the display, indicates the message status as a Error message.



Battery Gauge

  The battery indicator is located on the status screen and keeps you informed of battery energy level. The three indicators range from  (1/2),  (low). Whenever the low battery shows on display, Please replace the new battery in to make sure the pager is in receivable condition.

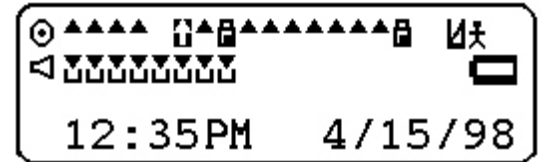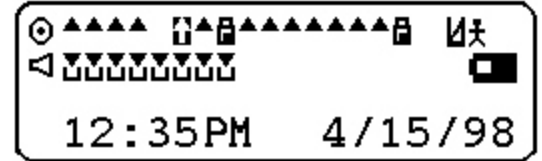

Features and Functions

4-Line , 84 English Alpha Character Memory

Easy-To-Read Back-Lit Display

Up To Memory Capacity 28,627 Characters.

16 Memory Slots + Message Full 10 sets

Personal Message Memory : 10 sets , Mail Drop Available

Show Time Of Day And Date

User Selectable 12 / 24 Hour Clock

Message Date And Time Stamping

Incomplete Message-In Indication

Duplicate Message Indicator

Locks Important Message (Up To 10 Sets)

All Or Individual Message Delete

Unread Message Indicator , Reminder Alert

Low Battery Alert , Low Battery Indicator

Zoom The Display - To Enlarge Message For Easy Read Ability

Message Full Indication , Message Full Auto Storage

Message Preview For A Quick Look At Each Message

Message Move to Memo (User selectable)

Service Area Indication

5 Built-In Alarm Clock


4 Beep Alerts / Silent Vibration / Silent then Beep / 8 Musical / Sleep Mode

Private Time - For The Ability To Turn Off All Pager Alerts During Pre-Selected Times


Mail Drop Alerts

 
Save Message When Off And When Changing Battery

Backlighting

You can manually activate the back-lit at any time by pressing and holding  for three seconds . If no other buttons are pressed, the back-lit automatically turns off when the pager returns to the standby mode .

Duplicate Message

The pager automatically covers by the latest messages if it is received the same message. The  symbol is shown in the top left-hand corner of the display , indicates the message status as a "Duplicate Message".


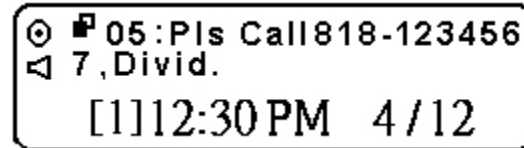


Reading Full Message

Press ◀ or ▶ , to move the flashing icon to the 📧 symbol.

Press ⏸ , to read message.

  When the 📧 symbol is shown in the top left-hand corner of the display , indicates the message status as a full message.

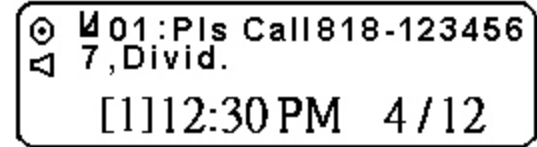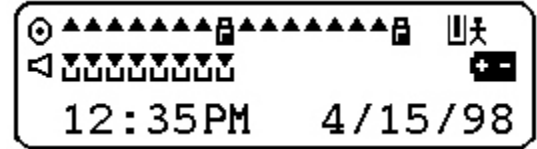

LCD Display



Pager Status Symbols

- POWER ON INDICATOR
- MUSIC ALERT
- BEEP ALERT
- AUTO SLEEP INDICATOR
- ALARM INDICATOR
- AUTO SCROLL INDICATOR
- BATTERY CAPACITY
- OUT OF RANGE INDICATOR
- ERROR MESSAGE
- DUPLICATE MESSAGE
- MAIL DROP MESSAGE
- MEMO MESSAGE INDICATOR

Message Status Symbols

- MESSAGE IN MEMORY
- MESSAGE SELECTING
- MESSAGE LOCK IN MEMORY
- MESSAGE LOCK SELECTING
- PERSONAL MESSAGE
- FULL MESSAGE
- PERSONAL MESSAGE SELECTING
- FULL MESSAGE SELECTING
- MAILDROP IN MEMORY
- MAILDROP SELECTING
- DUPLICATE MESSAGE

Function Menu Symbols

- UP OR ESCAPE
- SET ALERT
- PAGER OFF
- SET AUTO SLEEP
- SET ALARM
- SET TIME
- SET SCROLL
- ZOOM IN / ZOOM OUT
- MESSAGE LOCK
- MESSAGE DELETE
- DELETE ALL
- MOVE TO MEMO
- MAIL DROP ALERT

 
 
 
 
Receiving And Reading Your Message

A flashing ▲ symbol indicates you have a message has not been read.(The symbol ▼ of mail drop shows on screen by flashing).

Press ◀ or ▶, to preview the message.

Press Ⓚ, to display your message.,Press Ⓚ again, to view the next screen.

If you have set " Auto Scroll " , your pager will scroll through your message screen by screen automatically .

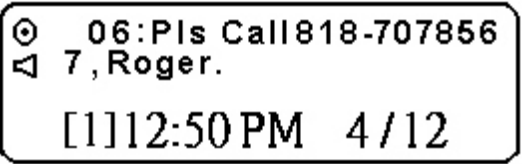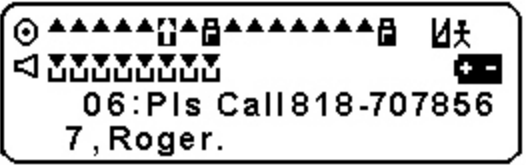
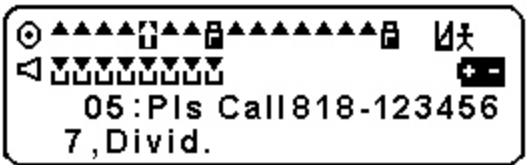
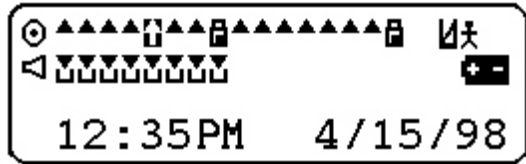


Reading Personal Message


Press ◀ or ▶, to move the flashing icon to the 𠄎 symbol.

Press ⏸, to read message.

   When the 𠄎 symbol is shown in the top left-hand corner of the display, indicates the message status as a personal message.

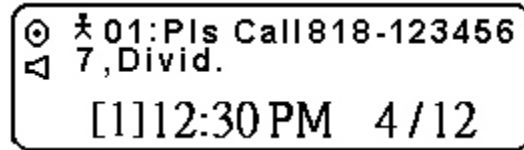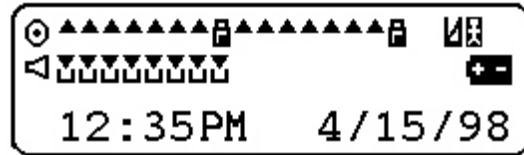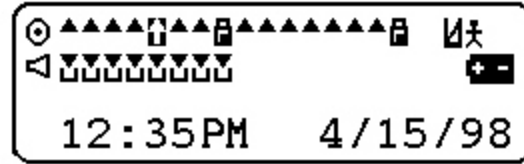




Moving the Cursor

Press ◀ or ▶ to move cursor to the  icon flashes, indicating the present position of the message you are going to read.

Press **||**, the screen shows " UP OR ESCAPE ".

Press **||** once, the flashing icon can be move to the top row or the second row.,such like "MAIL DROP AREA"or"MESSAGE AREA".

Press **||**, the pager returns to standby mode.

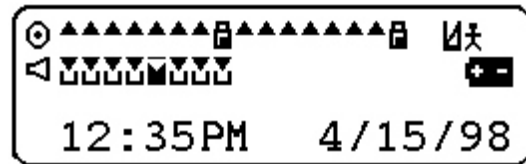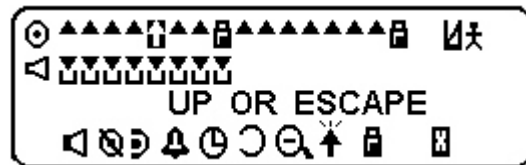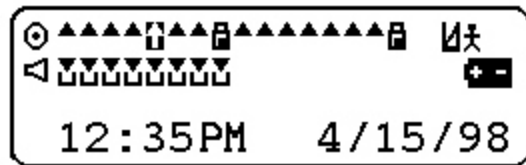   



Locking Messages

Press ◀ or ▶ , to move the cursor to the desired flashing symbol □ .

Press || , press ◀ or ▶ to select the desired message to lock.

Press || , to lock the message. .

  The symbol □ is displayed , indicating the status of the message in memory.


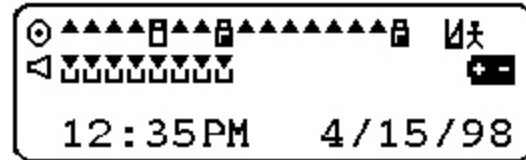
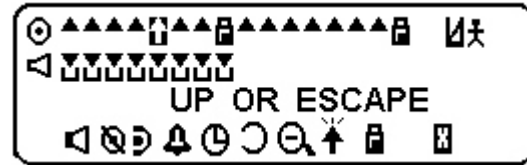


Unlocking Messages

Press ◀ or ▶ , to move the cursor to select the message to unlock.

Press || , then , press ◀ or ▶, to " MESSAGE UNLOCK " Mode.

Press || , to unlock the message.

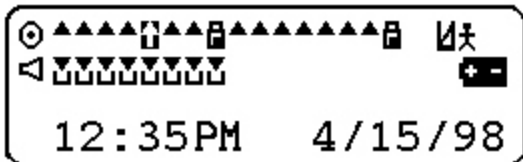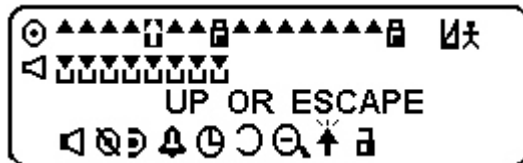  
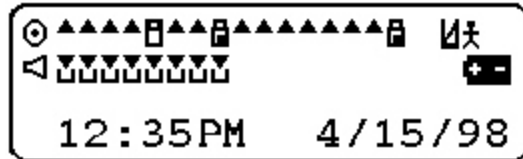 


Reading Mail Drop


Press **II** twice , to move the flashing icon in the second row.

Press **⏵** , to read message or press **◀** or **▶** , to move the icon to the desired Mail drop.

  
The features allows 14 sets Mail Drop

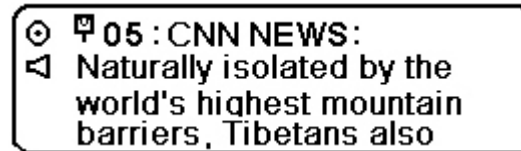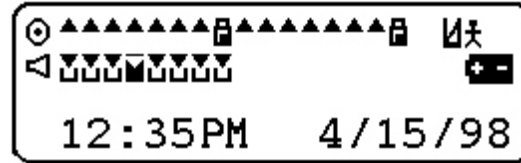




Setting Zoom In / Zoom Out

Press **||** ,then press **◀** or **▶**, to "ZOOM IN".(symble ), Then, press **||** to confirm..

The letters on screen enlarge and become two lines to read.

Or press **◀** or **▶** to move the cursor again to " ZOOM OUT " (symble ), and press **||** to complete.

   The letters on screen change to four lines to read.


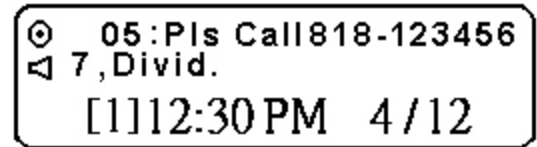
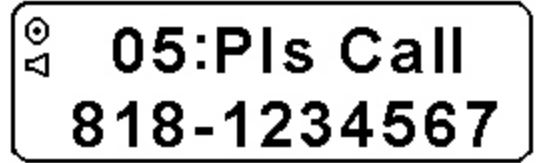
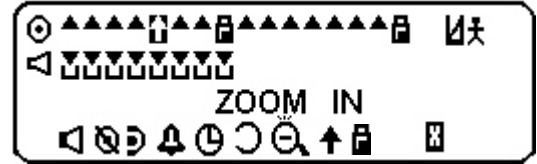


Deleting Messages

Press ◀ or ▶ , to move the cursor to select the message you desire.
Press ⓘ to read the message.

Press ⏸ , press ◀ or ▶ , to display " MESSAGE DELETE " Mode.

    When " MESSAGE DELETE ? " is displayed on the screen , press ▶ to delete the message.

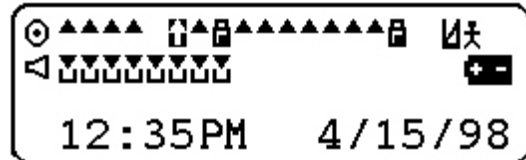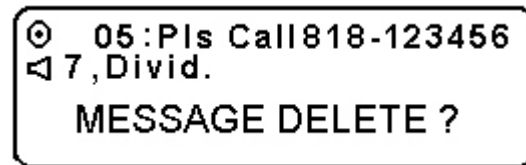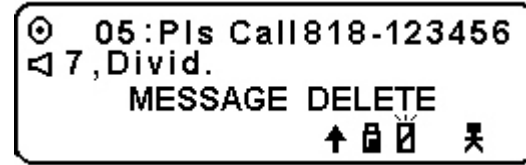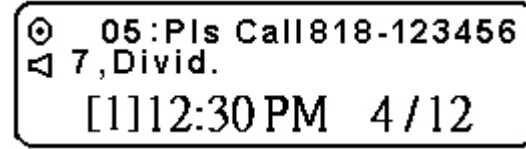


Deleting All Messages

(All unlocked and read messages)

Press **||** , press **◀** or **▶** , to "DELETE ALL" Mode .

 
When "DELETE ALL ?" is displayed , Press **▶** ,all unlocked and read messages are deleted.

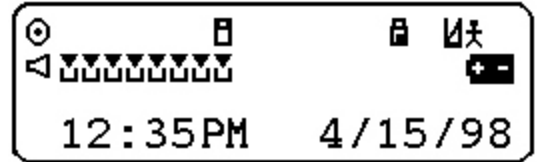

Setting Scroll

Press **▶** to activate the function.

 When the Auto scroll is set, the **↶** symbol is displayed on screen.

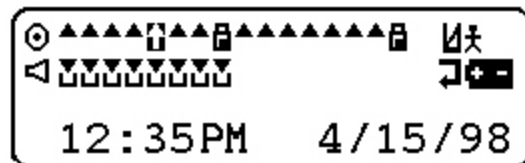


Setting Scroll

Press **||** , then , press **◀** or **▶** , to " SET SCROLL " Mode .

Press **||** , to enable scroll automatically.

Press **||** , to select the scroll speed.

 - (1) **■** -- slow.
- (2) **■ ■** -- normal.
- (3) **■ ■ ■** -- rapid.
- (4) **X** -- off




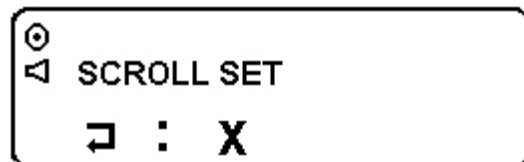


Move Message To Memo

Press ◀ or ▶ , to move the cursor to the desired storing message.
 Press ① to read the message.

Press ⏸ , and press ▶ once, to move to " MOVE TO MEMO "

    Press ⏸ , to move the flashing icon message automatically into your memo mail .

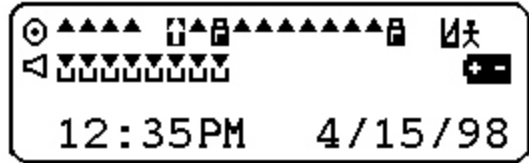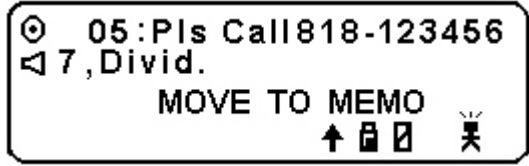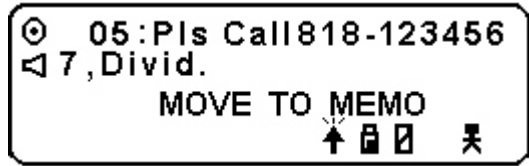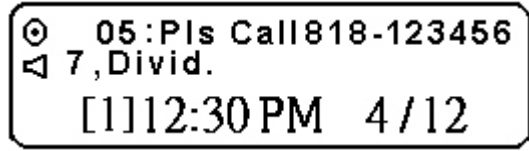

Setting Alert




Press **||** , then , press **◀** or **▶** once to display " SET ALERT " Mode .

Press **||** , to enable "SET ALERT".

Press **||** , to move the cursor to the desired alarm mode .(Alert **🔔** / Musical **🎵** / Vibration **📳** / Sleep **🛌** are optional)

Press **◀** or **▶** , to move to the cursor to the desired tone or music .

   Press **⏻** setting the alert is completed.

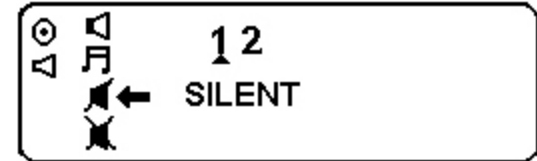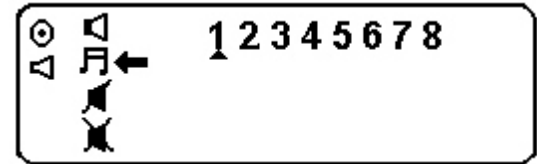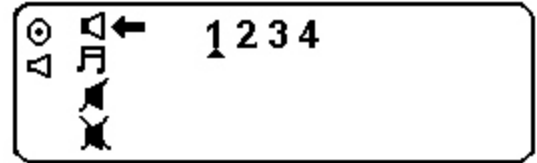




Setting Time And Date

Press **||**, then **,**, press **◀** or **▶** once until "SET TIME " Mode is displayed.

Press **||**, to enable set time. .

Press **◀** or **▶**, to move the cursor to the hour / minute digit .Then press **||** to adjust each set of digits : AM/ PM/24 hr / month / day.

   Press **⏻** to activate the time and date change.

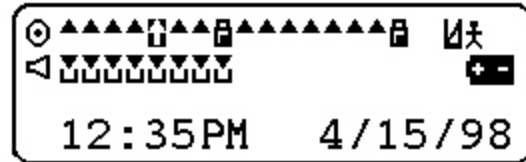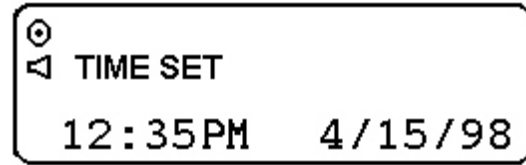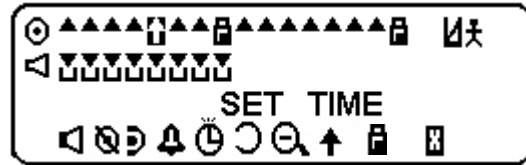

Setting Alarm (5 alarms)


Press **||** , then , press **<** or **>** to "SET ALARM "Mode.

Press **||** , to enable.



 Press **<** or **>** , to move the cursor.

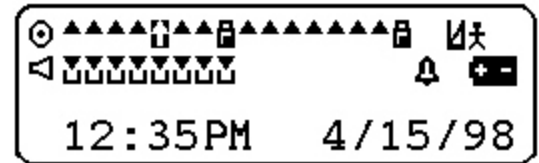

Press **||** , to set the alarm status either alarm enabled , alarm disabled or set time.

 
 
 
Press **⏸** setting the alarm is completed.



Setting Alert

The  or  symbol is displayed if the message receiver is in the audible or musical mode .

The  or  symbol won't display on screen if the receiver is in the silent mode or sleep mode.

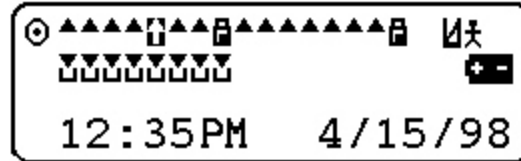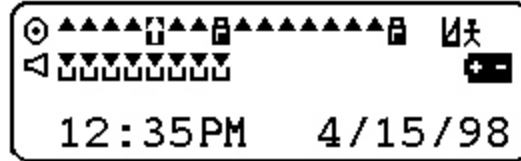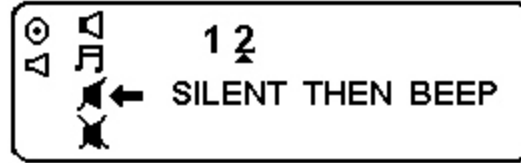

Turning Your Pager Off

Press **||** , then , press **◀** or **▶** ,
to " PAGER OFF " mode.

Press **||** , till " PAGER OFF ? "
appears on the screen.

Press **▶** , to turn the pager off .

After turning your pager off , the
screen is empty.

Press **⏻** , to turn the pager power
on.



Setting Auto Sleep

Press **II** , then, press **◀** or **▶** to display " Auto Sleep " mode.

Press **II** , to enable " Auto Sleep Set " Mode.

Press **II** , to select "open" or "close" (symbol **⌂** or **-**) and adjust the digits, press **◀** or **▶** for moving the cursor.

Press **⓪** setting auto sleep mode is completed. The screen returns to stand-by status.

⌂ is displayed when the Auto Sleep mode is set.

The enable **zzz** symbol indicates your pager is during setting status.

